


SAFETY
SAFETY
SAFETY
SAFETY
SAFETY
SAFETY
SAFETY

A N D O P E R A T I O N S O F
YOUR CHINASPORTS/NORINCO MODEL 1911A1
PISTOL

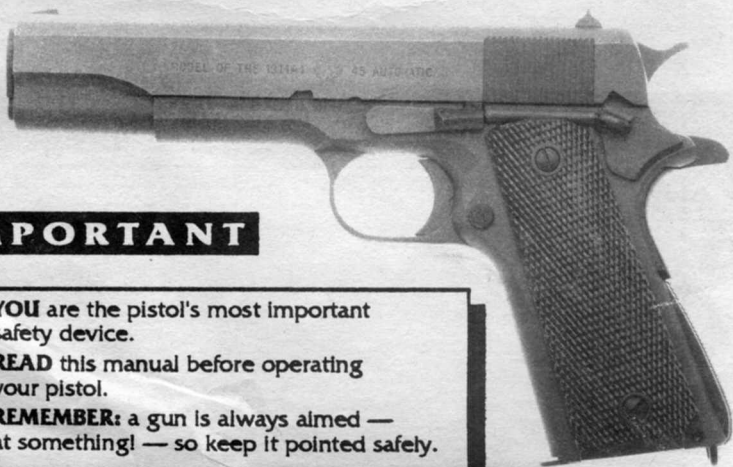

IMPORTANT

- **YOU** are the pistol's most important safety device.
- **READ** this manual before operating your pistol.
- **REMEMBER:** a gun is always aimed — at something! — so keep it pointed safely.

ChinaSports Inc. • P.O. Box 3250 • Ontario, CA 91761

TABLE OF CONTENTS

PAGE 2	SAFETY NOTICES WARRANTY
PAGE 3	PARTS NAMES FOR THE 1911A1 4 STEPS TO CLEARING YOUR PISTOL
PAGE 4	FIELD STRIPPING (ILLUSTRATED)
PAGE 5	REASSEMBLY CARE AND CLEANING
PAGE 6	LOADING AND FIRING (ILLUSTRATED)
PAGE 7	MALFUNCTIONS
BACK COVER	18 SAFETY RULES

SAFETY NOTICES


ChinaSports/NORINCO shall not be responsible in any manner whatsoever for the physical injury or property damage resulting from the use, misuse, criminal, negligent or careless handling of any of its firearms. Also, ChinaSports/NORINCO is not responsible for injury or damage caused by firearm modification, hand-loaded or reloaded ammunition or damage or neglect.

You are responsible for the care and use of this firearm.

Wear EYE and EAR PROTECTION when shooting or when in the area of gunfire.

WARRANTY

1. In an effort to maintain the highest quality and product reliability, all ChinaSports products are covered under a full coverage warranty for a period of one (1) year from the date of purchase to the original owner. Any part which is found to be defective by reason of workmanship and or materials, shall be repaired or replaced at ChinaSports option.
2. ChinaSports maintains a full staff of factory trained service personnel to repair our products at our main warehouse in California.
3. Every effort will be made by ChinaSports to give the customer satisfaction in his purchase.
4. ChinaSports retains the right to repair or replace product returned for service at its option.
5. Customer abuse, neglect or misuse of a product is not covered by this warranty and a product found to be abused, neglected, or misused will be returned unrepaired or the customer will be charged for the parts and labor to repair the product.
6. To obtain service, the customer, be it dealer, distributor, or consumer, must return the ChinaSports product in a suitable shipping container to ChinaSports California warehouse. Any postage, insurance, and shipping cost incurred in presenting or sending the item for repair is the responsibility of the customer. Items for repair should be shipped by United Parcel Service.
7. Invoice, bill of sale or other proof of the date of purchase must be sent to obtain service under the warranty. Those products that in ChinaSports opinion do not have proper proof of date of purchase will be charged for repair.
8. For repairs charged to the customer, ChinaSports will estimate cost of repairs for customer approval before proceeding with repairs.
9. ChinaSports is not responsible for improper, criminal, or negligent use of its products, or for the loss of services, or damages due to the failure of sold products.

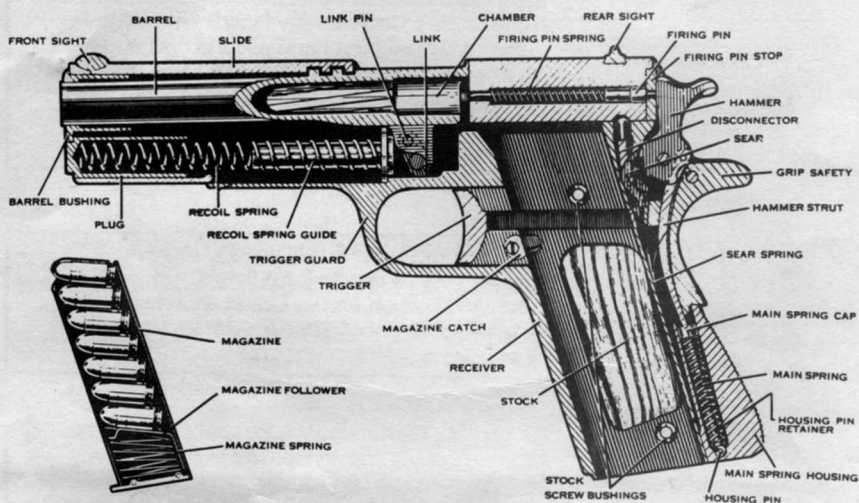

4 STEPS TO CLEARING YOUR PISTOL

1. Point your pistol in a safe direction. Make sure your finger is out of the trigger guard.
2. Remove the magazine by pressing the release button.
3. Grip the slide with your non-shooting hand and retract the slide rearward 'til it stops.
4. Push up on the slide stop 'til the slide is held by the stop. Now check the chamber to be assured the gun is unloaded.

Always unload any firearm before handling or handing it to someone else.

