


TiptonTM

Gun Cleaning Supplies

Gun Vise

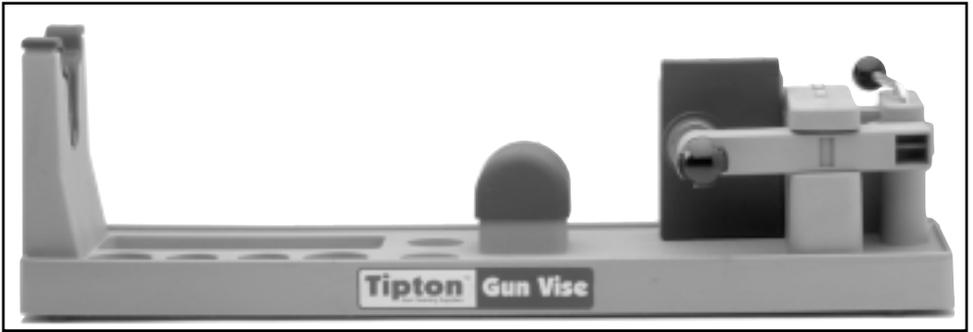

– Instructions –

Gun Vise Instructions

Thank you for purchasing a Tipton™ Gun Vise. We designed this product to hold your rifle securely during cleaning, routine maintenance and minor gunsmithing tasks.



Warning: the Tipton™ Gun Vise was designed for gun cleaning, repair, and maintenance and SHOULD NEVER BE USED TO HOLD A GUN WHILE TEST FIRING OR SIGHTING IN.



Always wear safety glasses around firearms and cleaning solvents.



Always make sure that your gun is unloaded and pointed in a safe direction. Never stand in front of the muzzle, even if you know the gun is unloaded.




Picture 1


Instructions:

1. Put the Tipton™ Gun Vise on a flat surface with enough clearance for the gun barrel to protrude out the left side.
2. Turn the fine adjustment knob counter-clockwise as far as it will go (picture 2).
3. Make sure the cam lever is turned to the back of the unit (picture 2).
4. Place your gun in the Tipton™ Gun Vise as shown in picture 1.
5. Turn the cam lever to the front (picture 3).
6. Turn the fine adjustment knob clockwise until the pivot arm pad touches the stock.
7. Open the cam lever slightly. (See indicator line).
8. Turn the fine adjustment knob clockwise two or three turns.
9. Close the cam lever (picture 3). This should tightly clamp your firearm while allowing the cam lever to a lock in a full forward position.
10. If your gun is not secure with the cam lever closed, or if the cam lever is difficult to close, repeat steps 7, 8 and 9 as necessary to adjust the pad to secure the gun.

Gun Vise Instructions

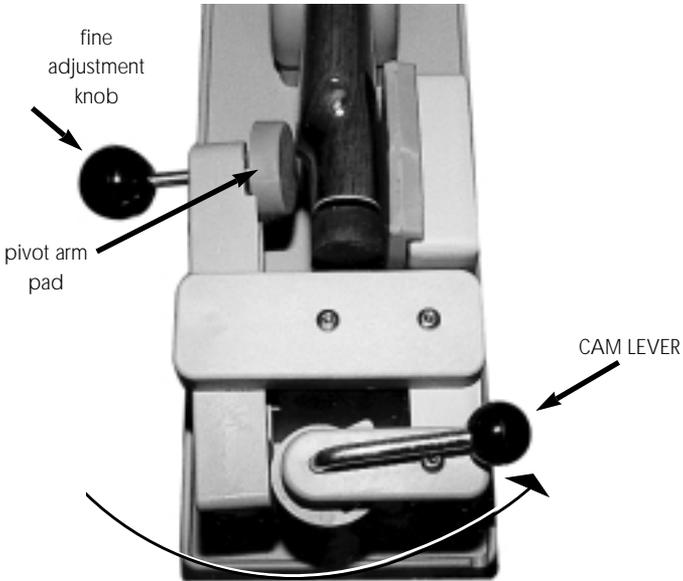

Picture 2

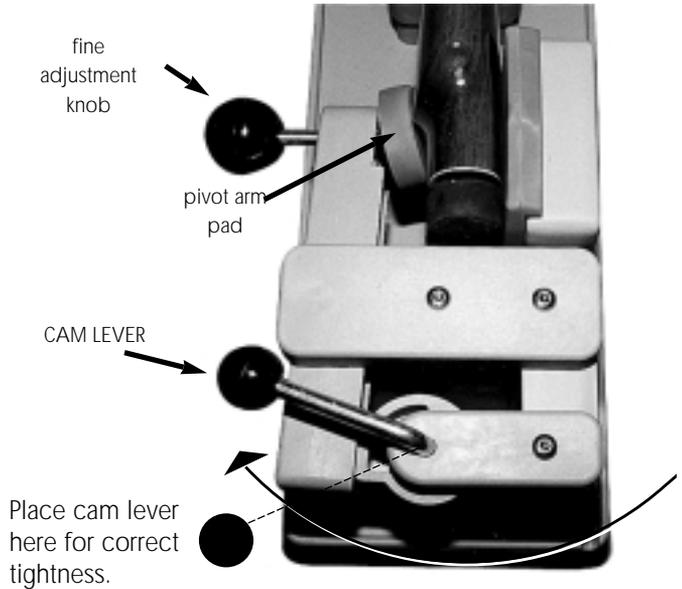

Picture 3

Limited Warranty

Every Tipton product is warranted to be free of defects in materials and workmanship for a period of one (1) year from the date of original purchase. Tipton will, at its option, repair or replace without charge, except for transportation costs, parts that fail under normal use and service when operated and maintained in accordance with our Instructions. This warranty does not apply to normal wear or to items whose life is dependent upon their use and care. This warranty is in lieu of all other warranties, expressed or implied and releases Tipton, its affiliates, and its vendors from all other obligations and liabilities.

5885 W Van Horn Tavern Rd. • Columbia, MO 65203

Visit our web site at www.tiptonshooting.com

A **Battenfeld** Product

Revised: 1-20-00